


Viblock

Sealer Information

viblock.co.nz

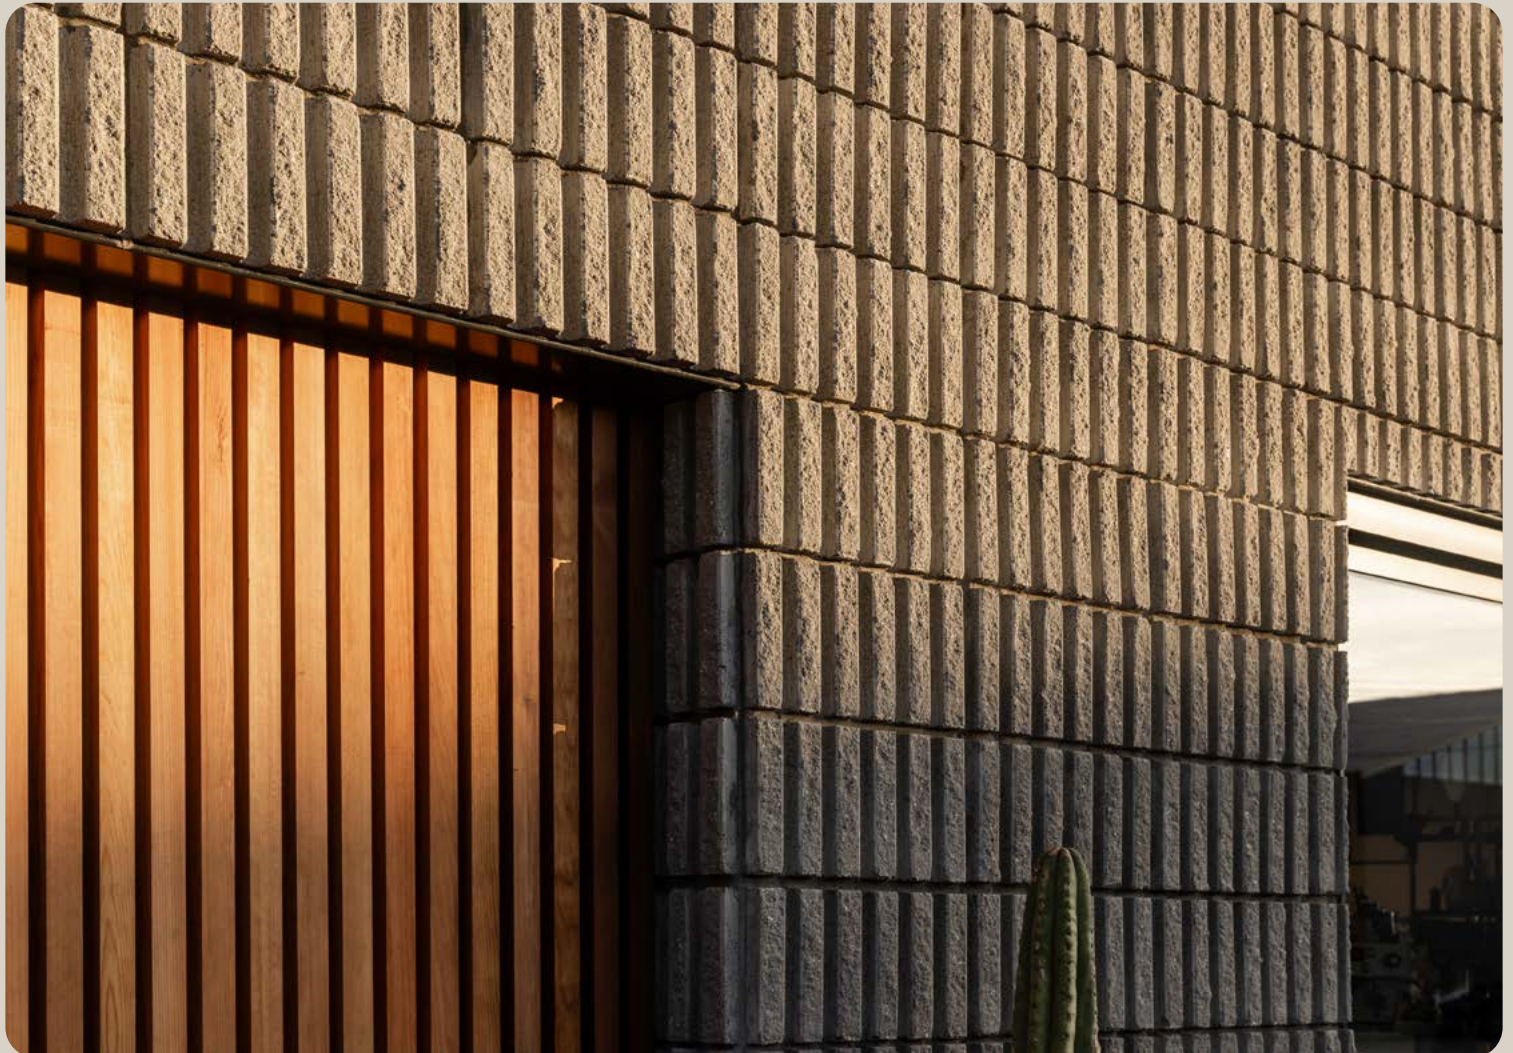

Viblock has teamed up with Peter Fell to offer a range of sealers for our masonry veneers.

	Container Size	Ex Yard Price	L/ M ² Applied	M ² of Masonry per Container
Viblock Penetrating Sealer	20L	\$400.00	10-15	100m ² -150m ²
Viblock Wet Look Sealer	20L	\$300.00	5-8	50m ² -86m ²

The application numbers above assume two coats. When ordering wet look, order two containers of wet look for every penetrating container.

Key Information conditions.

- Sealers can be used on any of our products, recommended especially for Kiwi bricks and blocks that don't require Sto "weathertightness" system.
- Specific sealer information sheets provided
- Can be done by homeowner or trade professional instruction on following page, also refer to specific product information sheets.
- Penetrating sealer is guaranteed for 10 years but will likely last much longer.
- Wet look sealer needs to be applied after two coats of penetrating sealer and will last between 6 - 10 years depending on Sun conditions.

Sealing Instructions

Set up

- Read the accompanying product information for your sealer (Viblock will provide this).
- Appropriate PPE – full covered clothes, mask, gloves, and eye protection.
- Bricks must have been laid for 4 weeks prior to sealing.
- Ensure the bricks are clean prior to sealing, a dry brush can be used if any last touch ups are required on the day.
- The bricks need to be dry for 3 days prior to sealing.
- Sealing should be done between 10°C and 30°C degrees.
- You can spray, roll, or brush on the sealer.

If using a sprayer;

- a simple solo sprayer will work (ensure solvent resistant seals)
- avoid doing if any wind
- wear appropriate PPE
- Cleaning sealing equipment with xylene-based thinners.

Sealing

- Avoid sealing anything other than the bricks
- All other surface areas must be covered to protect them from the sealer (Windows, doors, soffits, etc) **failure to do so could contamination especially if spraying wet look sealer.
- Ensure contamination is cleaned immediately.
- Second coats should be applied while first coat is still wet, in warm conditions it is recommended to do a maximum 5m² area then reapply second coat. **if the first coat dries it will repel the second coat.

